HOLDEN COLORADO RG “FACELIFT” 2016-2020 MIRROR FOLDING MODULE



Installation Notice – Professional Installation Recommended

This product is designed to integrate directly with the vehicle's electrical and body control systems. Incorrect installation may result in:

- **Damage to the vehicle's wiring harness or control modules**
- **Fault codes or malfunction of mirror and central locking systems**
- **Electrical short circuits or blown fuses**
- **Voided manufacturer warranty**

For these reasons, installation is strongly recommended to be carried out by a qualified automotive electrician or experienced vehicle electronics installer.

Professional installers have the appropriate diagnostic tools, wiring schematics, and technical experience required to ensure:

- **Correct harness routing and secure connections**
- **Proper CAN/BCM integration (where applicable)**
- **Safe trim removal and refitment without damage**
- **Full functional testing after installation**

Do not attempt installation unless you are competent in automotive electrical systems.

Improper installation is not covered under product warranty.

BEFORE INSTALLATION:

Ensure that your RG Colorado Facelift has electric mirrors fitted. If your vehicle has them fitted, your mirror adjustment switch should look like the one pictured below.



If your car has this switch, push the L R toggle switch to the MIDDLE position, and press the DOWN button. Your mirrors should then fold inwards. Pressing the down button again will make them fold outwards. If everything above happens, this module is compatible with your car; if it doesn't, you do not have electric mirrors fitted and this module will not work with your vehicle.





Wiring Location

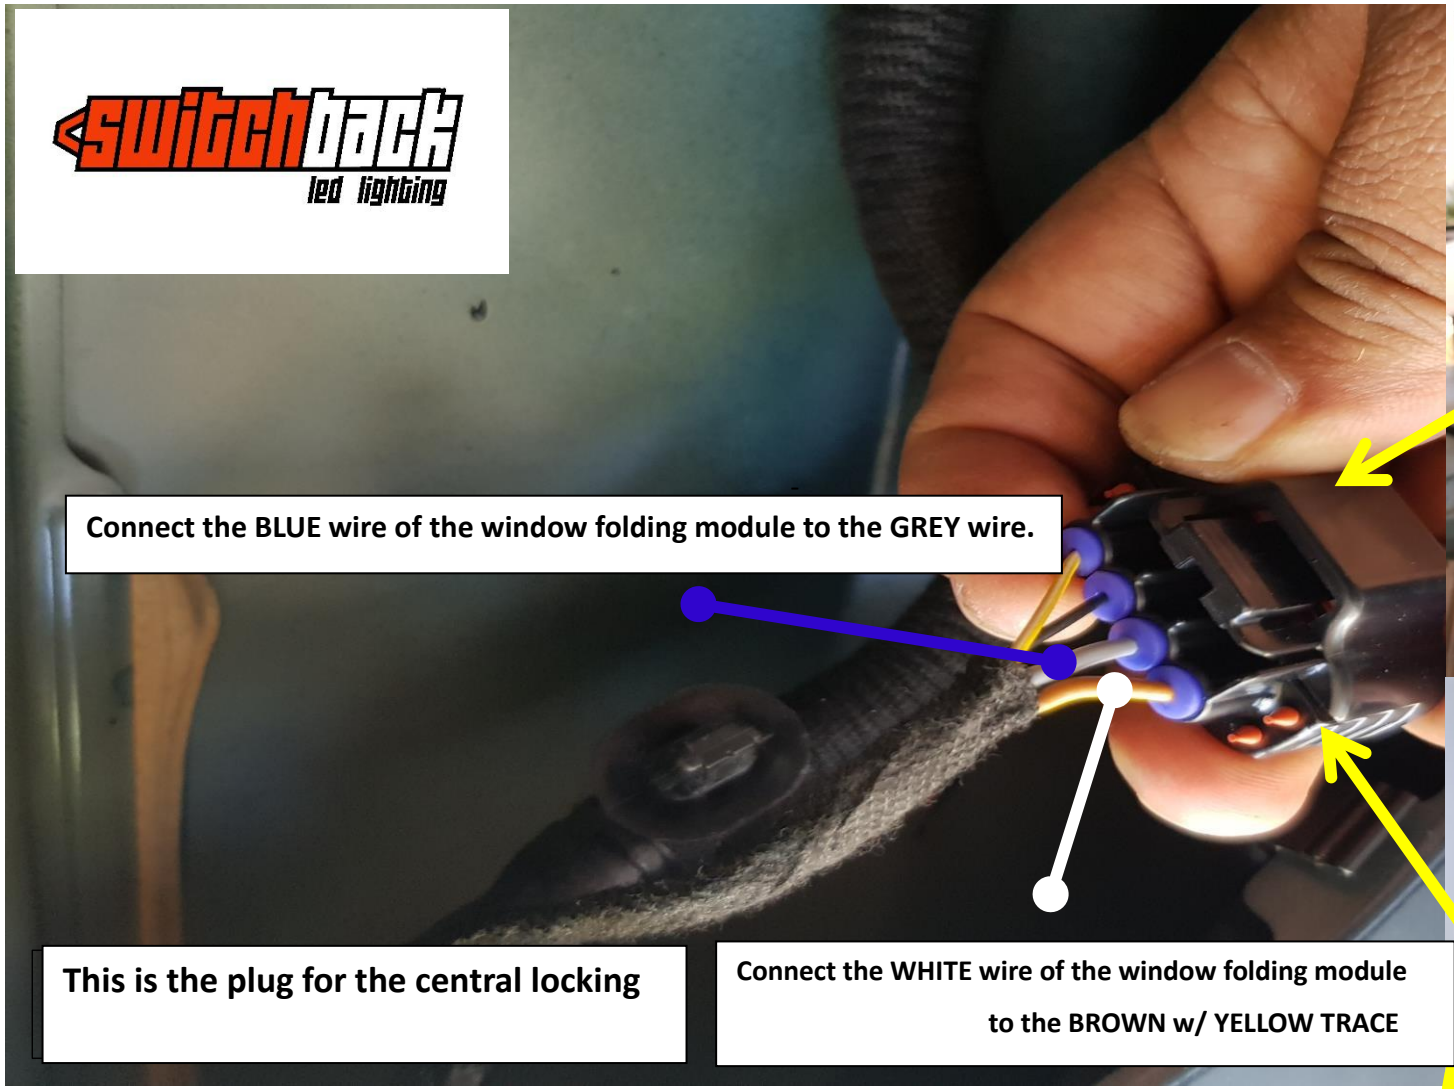
Wiring harness is located in top left section of the door. Peel weatherproofing back to reveal harness. 7/8 connections can be made through this wiring loom.

Alternatively, the connections can be made to the plugs itself which may be easier to identify. However, this will mean that some wiring will need to be extended.

If you have a multimeter, verify that you are connecting to the correct wires before making connections.

ELECTRICAL CONNECTIONS:

WINDOW MODULE	**VEHICLES WIRING HARNESS**
RED (12v +)	RED w/ WHITE Trace
BLACK (0v Ground)	BLACK
BLUE (LOCK MECH SOLENOID)	GREY (Thicker grey wire)
WHITE (LOCK MECH SOLENOID)	BROWN w/ YELLOW Trace
ORANGE (12v Ignition)	See notes below for this wire.
YELLOW (Side Mirror Switch)	WHITE w/ BROWN Trace **(CAR SIDE OF CUT)**
PURPLE (Side Mirror Switch)	WHITE w/ BROWN Trace **(SWITCH SIDE OF CUT)**
GREEN (Side Mirror Switch)	PURPLE w/ YELLOW Trace **(CAR SIDE OF CUT)**
PINK (Side Mirror Switch)	PURPLE w/ YELLOW Trace **(SWITCH SIDE OF CUT)**

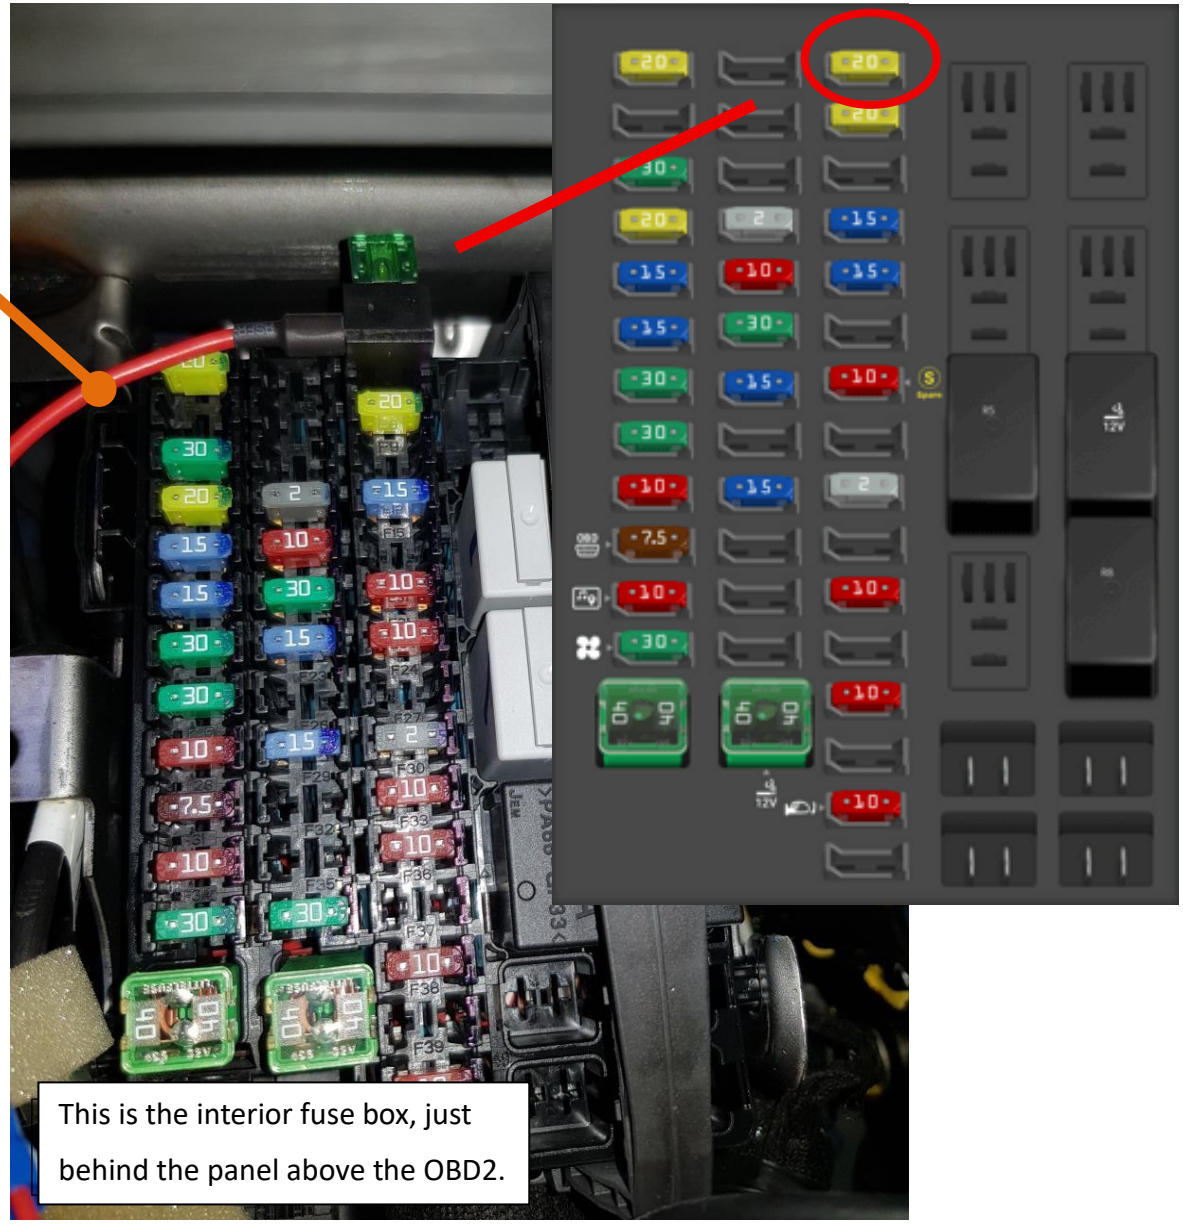

switchback
led lighting
Connect the BLUE wire of the window folding module to the GREY wire.
This is the plug for the central locking
Connect the WHITE wire of the window folding module to the BROWN w/ YELLOW TRACE


This plug is located inside the door in the yellow circled area below.

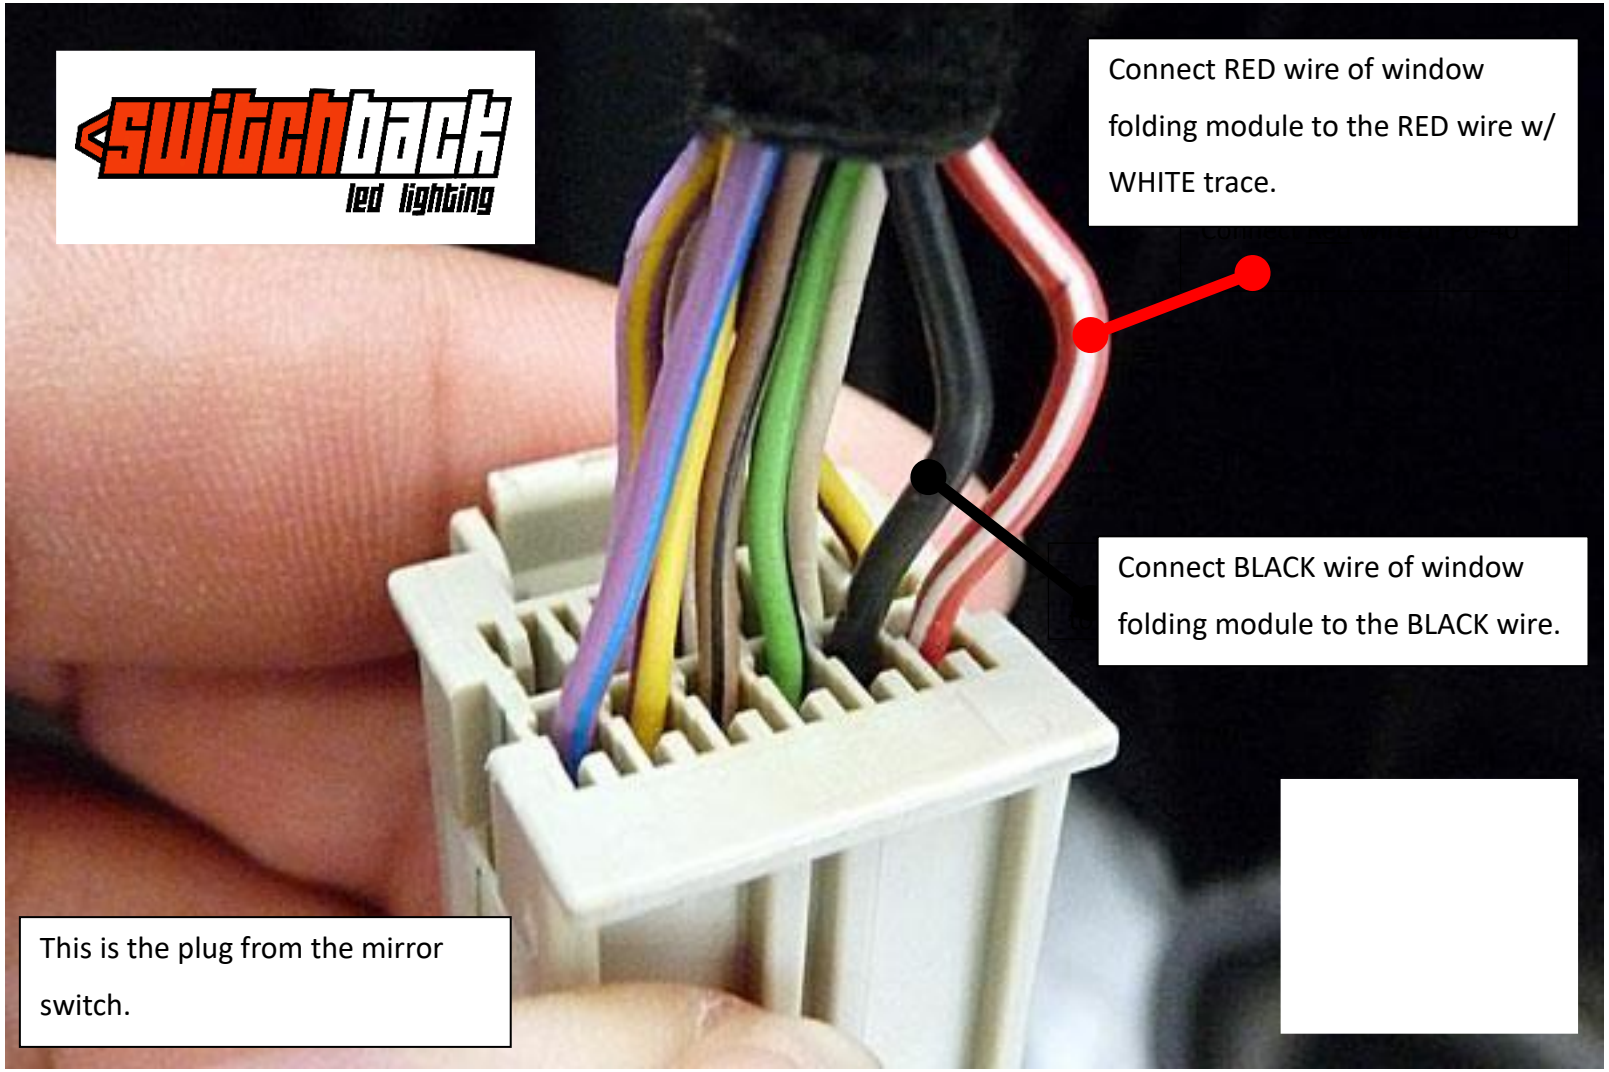

This socket is located inside the door on the yellow encircled area
View from inside the door

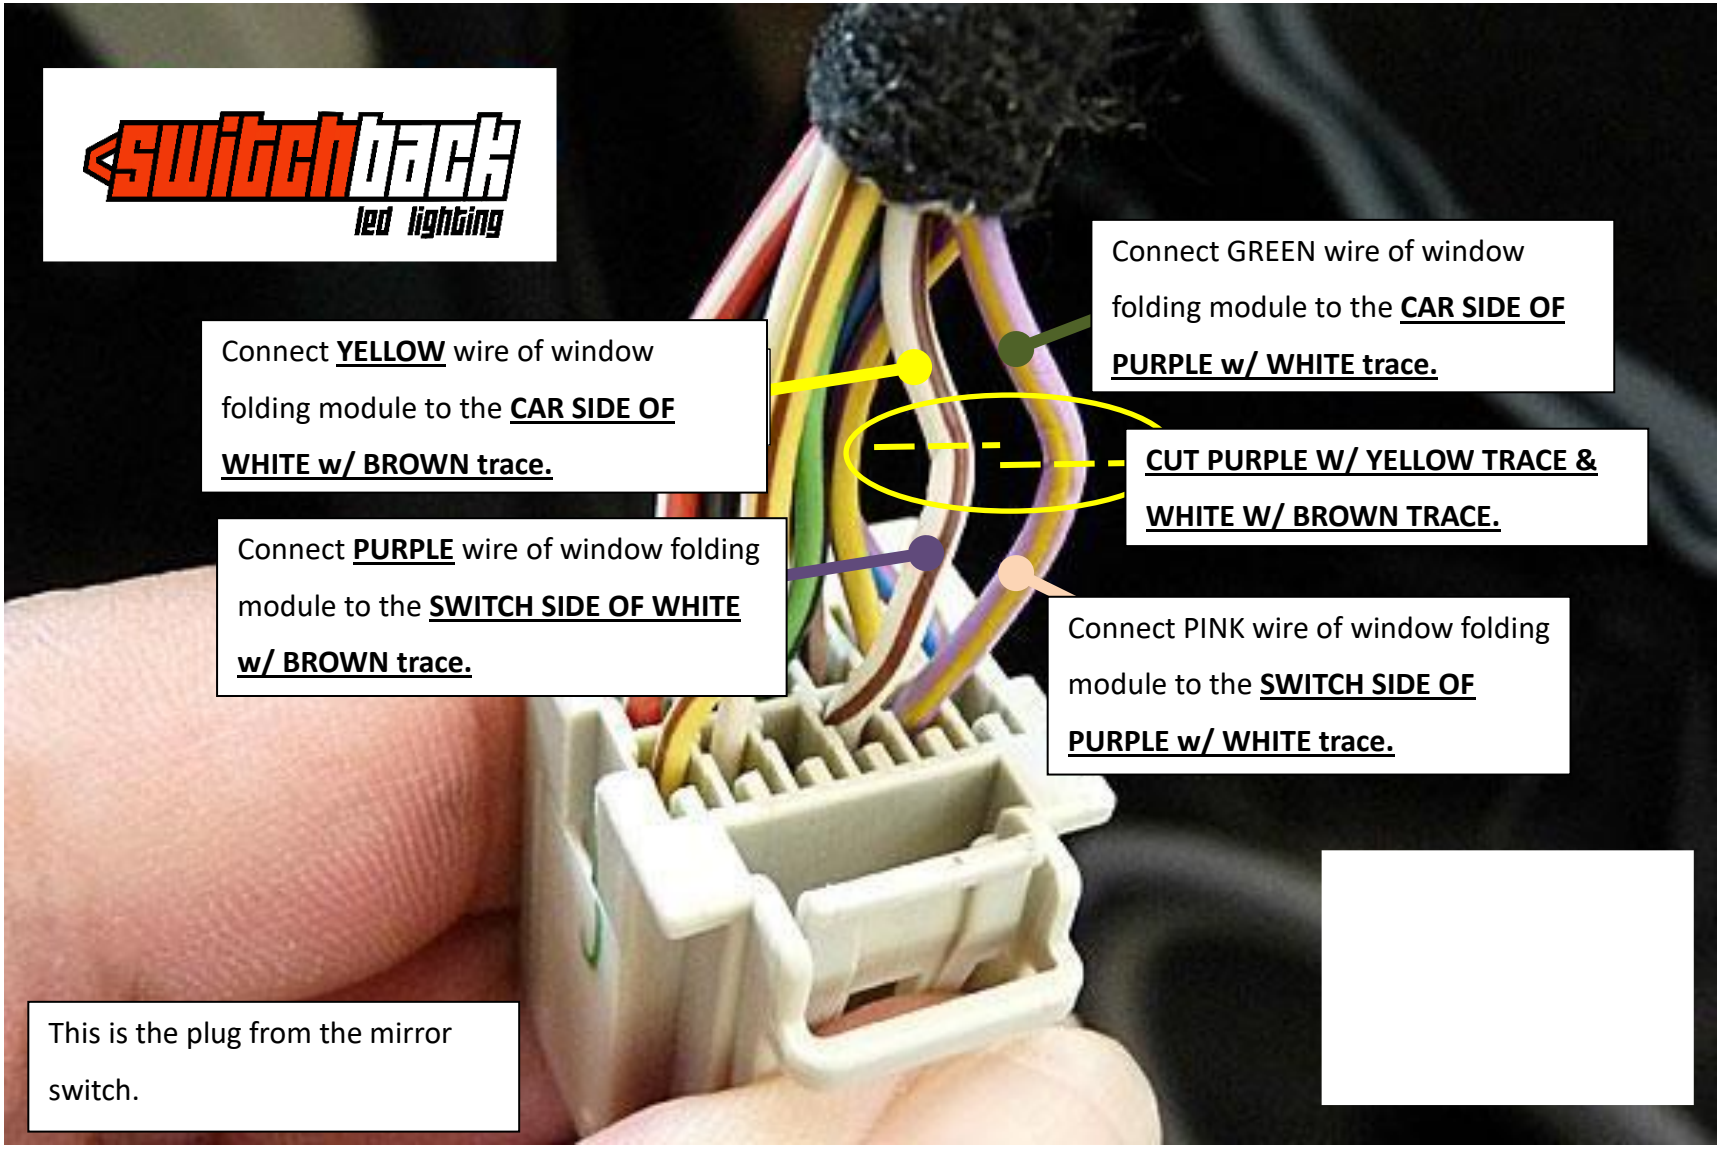
Connect the **ORANGE** wire of the window folding module to the fuse tap, soldering is preferred. Fuse tap is to be inserted into the **TOP** position on the right hand side, ensuring that you remove the existing fuse, and insert it into the bottom spot of the fuse tap.
You will need to extend the **ORANGE** wire and route through the door grommet.

PLEASE NOTE: When 12v is applied to the orange wire, the mirrors will NOT fold. If your vehicle locks when taking transmission out of park or locks while driving, you will need to connect this wire to ignition to prevent the mirrors from closing whilst driving.
If you don't mind the mirrors being able to fold via central locking while driving, the orange wire does not need to be connected.



This is the interior fuse box, just behind the panel above the OBD2.


switchback
led lighting
Connect RED wire of window folding module to the RED wire w/ WHITE trace.
Connect BLACK wire of window folding module to the BLACK wire.
This is the plug from the mirror switch.


switchback
led lighting
Connect GREEN wire of window folding module to the CAR SIDE OF PURPLE w/ WHITE trace.
Connect YELLOW wire of window folding module to the CAR SIDE OF WHITE w/ BROWN trace.
CUT PURPLE W/ YELLOW TRACE & WHITE W/ BROWN TRACE.
Connect PINK wire of window folding module to the SWITCH SIDE OF PURPLE w/ WHITE trace.
Connect PURPLE wire of window folding module to the SWITCH SIDE OF WHITE w/ BROWN trace.
This is the plug from the mirror switch.